

12 litre & 16 litre Knapsack Sprayer

Assembly Instructions

Parts List

Please remove contents from Sprayer Container:

Sprayer Container & Pump

Filler Filter

Filler Cap

Pump Handle & Rod

Lance Park & Loop

Split Pins x 4

Pump Handle Plastic Circlip

Hose & Handle Assembly

Fibre Glass Lance with 2 x Clamps & Grommets

O Rings x 4

Dual Nozzle (with Single Nozzle Cap)

Single Cone Spray Nozzle

Multi Hole Spray Nozzle

Fan Jet Spray Nozzle

Spare Glass Ball

Spare Pump Section Rubber Cap

Spare Parts Included:

O Rings x 2

Grommets x 2

Split Pins x 2

Glass Ball x 1

Pump Section Rubber Cap x 1



Pump Assembly:

1. Insert pump handle assembly into the hole in the container base. Secure with plastic circlip ensuring the circlip nub is located into the hole.
2. Adjust the pump handle so that the rod aligns with the hole on the pump cap. Before inserting the rod, feed the lance park and handle loop assembly on to the rod.
3. Insert the rod end into the black pump until the hole appears in the second opening. Secure with a split pin.
4. Adjust the lance park so that the cover locates over the pump cap and the loop can secure the pump handle. Secure on the underside of cover with split pin.

Lance Assembly:

1. Attach the end of the handle and hose assembly to the pump outlet and tighten the hose clamp on to the handle.
2. Fasten the fibre glass lance to the handle and hose assembly using an o ring to seal against the grommet.
3. Attach the selected nozzle assembly to the end of the lance using an o ring to seal against the grommet.

NB if a double nozzle is required, remove the cone spray nozzle from the single nozzle and add to the double nozzle moulding.

4. STRAPS. Ensure the strap clip is properly located in the slot in the container base.

Web: www.greenkey-garden.co.uk

Email: info@greenkey-garden.co.uk

Tel: 01594 560200

ADVICE:

Always wear appropriate protective clothing when spraying, including goggles for eye protection.